
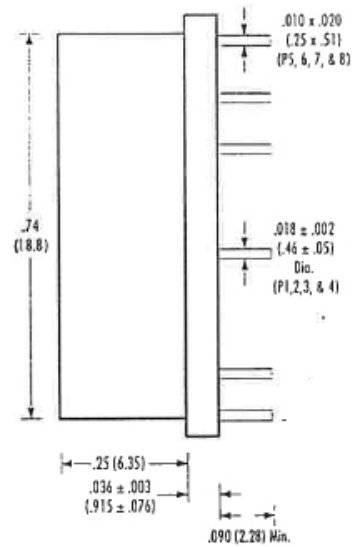


## VCO Package Outline

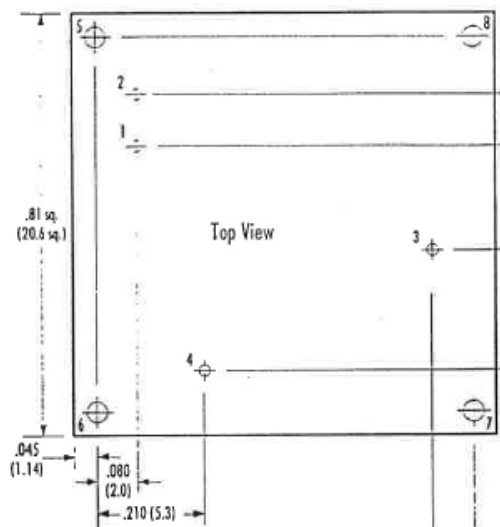

### Pin Functions:

1. RF Output
2. Ground
3. Tuning Voltage
4.  $V_{CC}$
- 5, 6, 7, and 8. Ground

Note: Pins 1, 2, 3 and 4 are press or interference fit. This allows the device to be installed and removed without damage to the device or migration of the pins.

[All Measurements in Inches(Millimeters)]

Unless otherwise specified  
Tolerances in Inches (mm):  
.xx =  $\pm .030$  (.762)  
.xxx =  $\pm .010$  (.254)